


RENWIL®


EST. 1967

INSTRUCTIONS ON HOW TO LEAN THE MIRROR AGAINST THE WALL
INSTRUCTIONS POUR POSER LE MIROIR CONTRE LE MUR


1b.

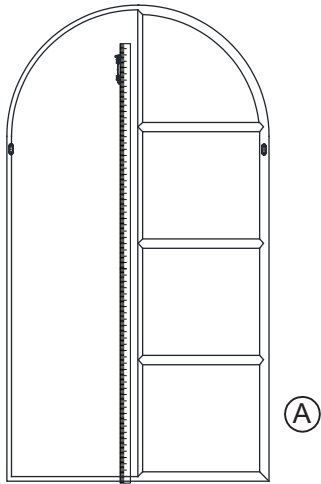

2.

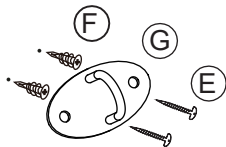


3.

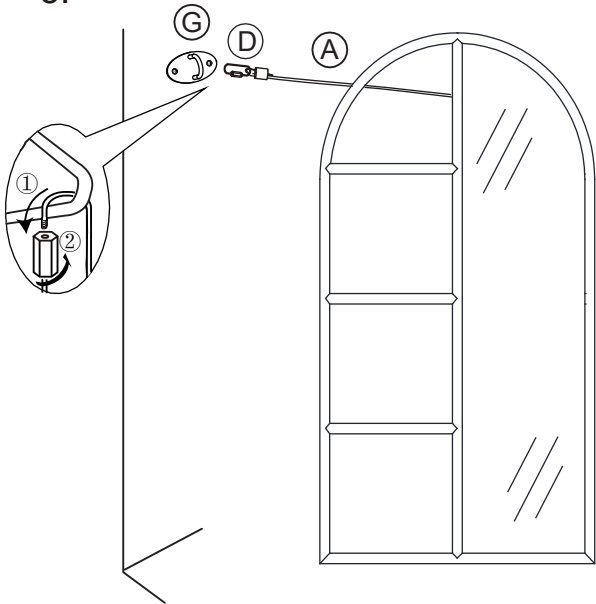


RENWIL®

EST. 1967

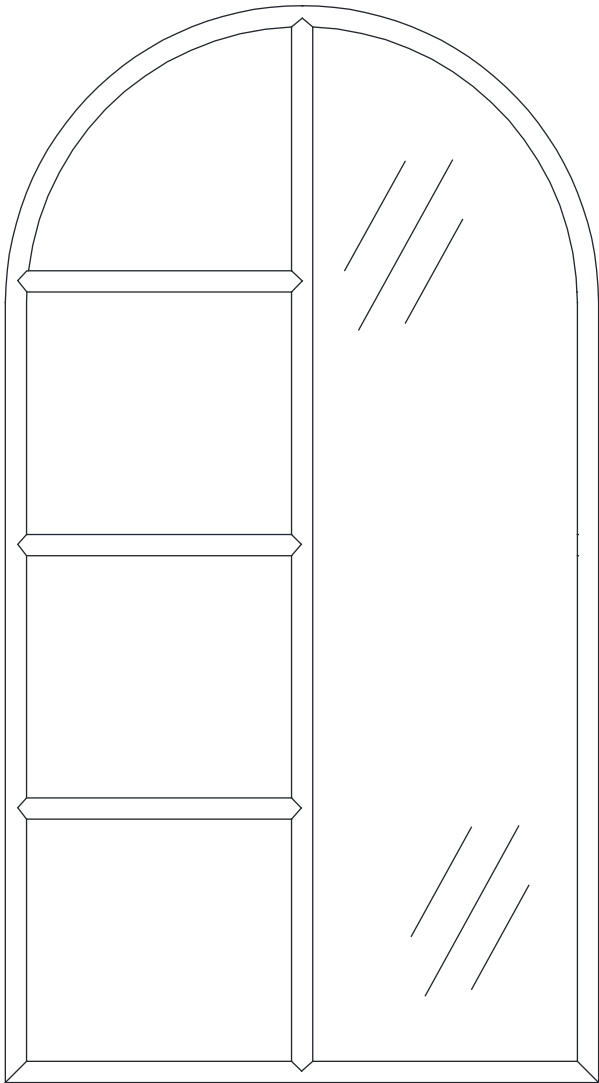

TRELLIS
MT2553

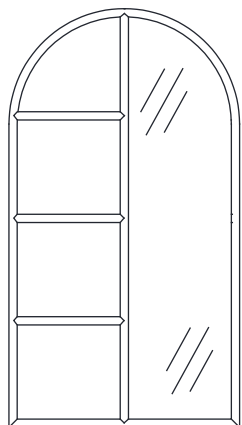

X 1

(A)



X 2

(B)



X 2

(C)



X 1

(D)



X 2

(E)



X 2

(F)



X 1

(G)



ENGLISH

*Before installation, ensure the supporting surface will support the weight of the mirror.

- Refer to page 2 to hang the mirror on the wall;
- Do not use wire to hang the mirror;
- Refer to page 3 to lean the mirror against the wall;
- For strength and stability, use the hardware mounts and nails included in the package. The anti-tip hardware or the keyhole slots are attached to the back of the mirror.
- Wipe clean with a soft dry cloth. Do not use surface cleaners that could damage the finish.


FRANÇAIS

*Avant l'installation, assurez-vous que la surface d'appui supportera le poids du miroir.

- Se référer à la page 2 pour accrocher le miroir au mur;
- Ne pas utiliser de fil pour accrocher le miroir;
- Se référer à la page 3 pour poser le miroir contre le mur;
- Pour plus de solidité et de stabilité, utilisez les supports à miroir et les clous inclus dans l'emballage. La quincaillerie anti-basculement ou les trous de serrures sont attachées à l'arrière du miroir;
- Essuyer avec un chiffon doux et sec. Ne jamais utiliser de produits nettoyants chimiques ou abrasifs cela peut endommager la finition.


INSTRUCTIONS ON HOW TO HANG THE MIRROR ON THE WALL INSTRUCTIONS POUR ACCROCHER LE MIROIR AU MUR

1a.

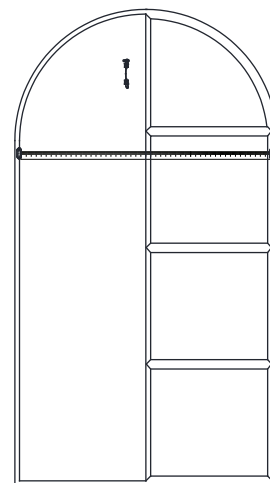

(A)

2.

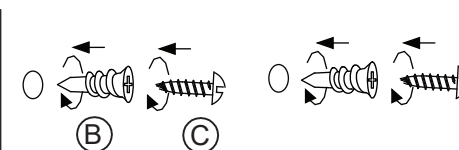

3.

