



RENWIL®
EST. 1967

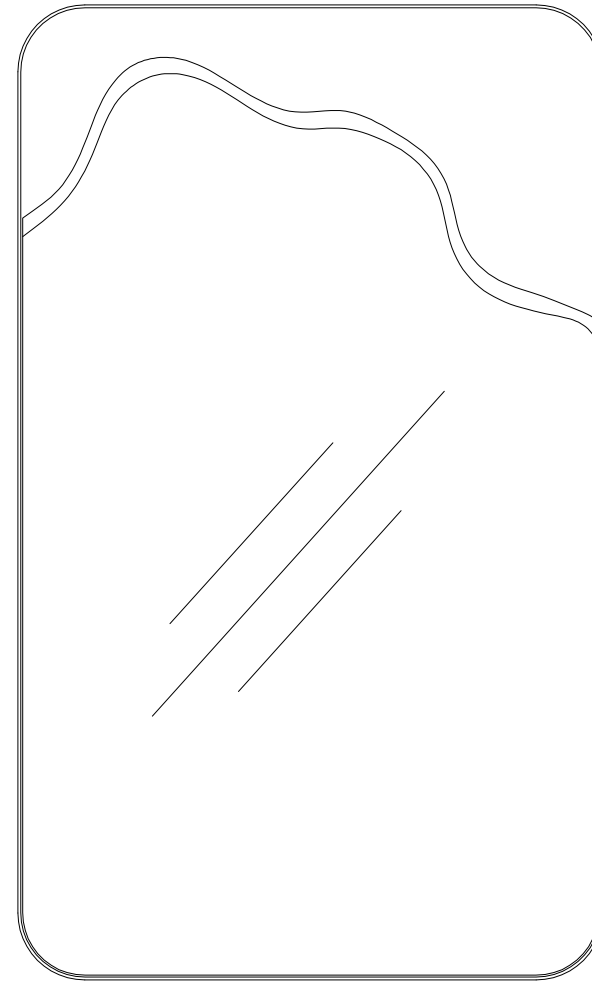

HERON
MT2779

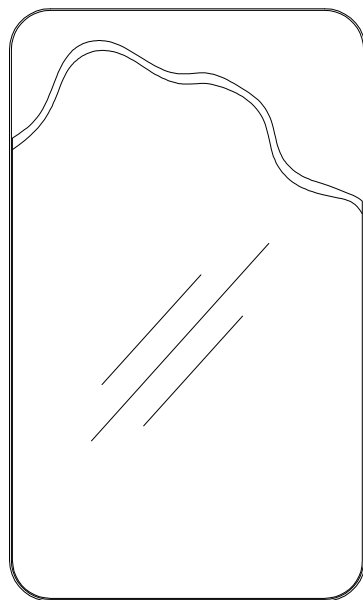

x1
Ⓐ



x2



x4

Ⓒ



ENGLISH

*Before installation, ensure the supporting surface will support the weight of the mirror


- Do not use wire to hang the mirror. For strength and stability, use the hardware mounts and nails included in the package. D-rings are attached to the back of the mirror;
- Wipe clean with a soft dry cloth. Do not use surface cleaners that could damage the finish.

FRANÇAIS

*Avant l'installation, assurez-vous que la surface d'appui supportera le poids du miroir.


- Ne pas utiliser de fil pour accrocher le miroir. Pour plus de solidité et de stabilité, utilisez les supports à miroir et les clous inclus dans l'emballage. Les anneaux de suspension en D sont à l'arrière du miroir;
- Essuyer avec un chiffon doux et sec. Ne jamais utiliser de produits nettoyants chimiques ou abrasifs, cela peut endommager la finition.

1.

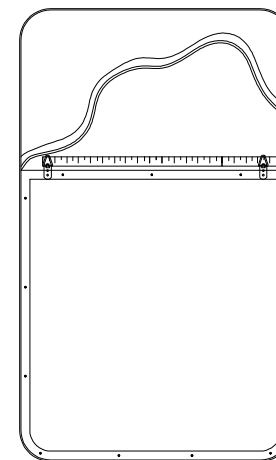


Ⓐ

2.

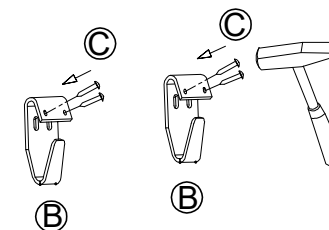

3.

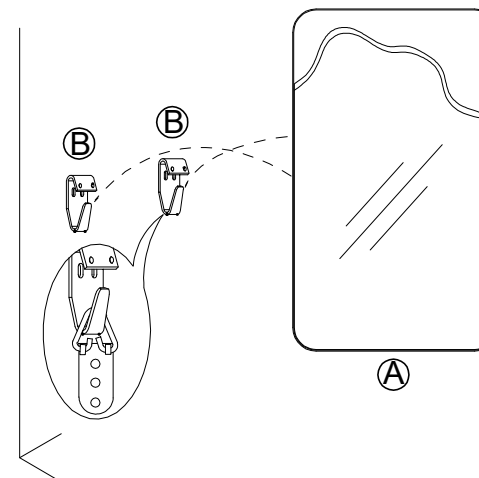

Ⓐ